

# morphy richards®



**Semi-electronic iron** *steam/spray shot*

Please read and keep these instructions

GB

**Fer à repasser semi-électronique** *vapeur/pulvérisation d'eau/jet de vapeur*

Merci de bien vouloir lire et conserver ces instructions

F

**Halbelektronisches Bügeleisen** *Dampf/Sprüh-/Dampfstoßfunktion*

Lesen Sie diese Bedienungsanleitung, und heben Sie sie gut auf

D

**Plancha semielectrónica** *chorro de vapor/spray*

Lea y guarde estas instrucciones.

E

**Semi-elektronisch strijkijzer** *stoom-/sproeistoot*

Lees deze gebruiksaanwijzing en bewaar hem goed

NL

**Ferro semi-electrónico** *disparo de vapor/spray*

Leia e guarde estas instruções

P

**Ferro da stiro semielettronico** *con getto di vapore/spruzzo*

Leggere e conservare le presenti istruzioni

I

**Semi-elektronisk dampstrygejern** *med spraypistol*

Læs og gem denne vejledning

DK

**Semielektroniskt strykjärn** *ång-/sprejdosing*

Läs och spara denna bruksanvisning

S

**Żelazko elektroniczne** *z funkcją uderzenia pary/spryskiwania*

Prosimy przeczytać poniższe instrukcje i zachować je do późniejszego wykorzystania.

PL

**Полуавтоматический утюг** *с функциями парового глаженья/распыления/усиленной подачи пара*

Внимательно изучите и сохраните данное руководство

RU



## GETTING THE BEST FROM YOUR NEW IRON...

### Safety first

Caution must be used when handling this appliance as it does get very hot. Always switch off the unit and allow to cool before cleaning or storing.

### Jet cleaning (Certain models)

Your iron will give the best ironing results and will last longer if you apply jet cleaning after each period of ironing.

### Self cleaning (Certain models)

Your iron will give the best ironing results and will last longer if you clean the soleplate once a month.

## IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

### WARNING: Danger to the person!

IMPORTANT: Damage to the appliance! In addition we offer the following safety advice.

### Location

- Do not use outdoors.
- The iron must be used and rested on a stable surface.
- When placing the iron on its heel, ensure that the surface on which the heel is placed is stable.

### Children

- Close supervision is necessary when any appliance is used near children.

- Young children should be supervised to ensure that they do not play with the appliance.

## Personal safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **WARNING: Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down, there may be hot water in the water tank.**
- **WARNING: To protect against the risk of electric shock do not put the appliance in water or in any other liquid.**
- Do not use the vertical steam feature on clothes that are being worn.
- Do not leave the iron unattended whilst plugged in or on an ironing board. Never allow the mains lead to over hang the work surface.
- The socket should always be off before plugging or unplugging from the socket. Never yank the cord to disconnect from the socket, instead, grasp plug and pull to disconnect.
- Do not allow the cord to touch hot surfaces. Let the iron cool completely before putting away. Loop cord loosely around the iron before storing.

## Other safety considerations

- Use the iron only for its intended use.
- Always disconnect the iron from the electrical socket when filling with water or emptying, and when not in use.
- Do not operate the iron with a damaged cord or if the iron has been dropped, damaged or leaking.

To avoid the risk of electric shock, do not disassemble the iron, but telephone Morphy Richards for advice. Incorrect reassembly can cause a risk of electric shock when the iron is used.

## Special instructions

- If your iron does not work, check the following points:

Has the temperature control been set to the required temperature? Is the plug in its socket? Is the plug itself or the socket faulty? (Check by plugging in another appliance).

- **WARNING: When not in use, your iron should never be placed flat and left on an ironing board.**





- To prevent damage to the textile being ironed, follow the temperature guide carefully. (Test the inside of the hem of the garment).
- When ironing is complete, remove the plug from the socket, empty any remaining water from the tank, and allow to cool before storage.

 
- If you drop or severely knock your iron this could cause internal damage even if the outside appears alright. Have it checked by a qualified electrician.
- It is recommended that you use up one beaker of water by operating your iron's steam and shot of steam functions before ironing any clothes as some dripping may occur while your iron's steam system is activated.

## INSTRUCTIONS FOR USE

### Temperature guide

Heat setting markings on the adjustable control dial of all Morphy Richards irons match those of the International Textile Care Labelling Code.

Symbol		 (120°C Max) Cool	 (160°C Max) Warm	 (210°C Max) Hot
Control knob positions	Do not iron at all	●	●●	●●●
Fabric		Nylon, Acetates e.g. Acrilan Courtelle, Orlon Triacetates, e.g. Tricel/Polyester	Wool, Polyester mixtures e.g. Polyester/Cotton	Cotton, Linen Rayon, Rayon mixtures, e.g. Rayon/Linen
Ironing		Iron on wrong side if moisture required use damp cloth (Not Acetate)		Fabrics requiring this setting usually require steam pressing for heavy cotton, denim etc.
With water in tank	← Dry and spray →		← Steam/spray/shot of steam →	← Jet clean →
Without water in tank				← Dry ironing →

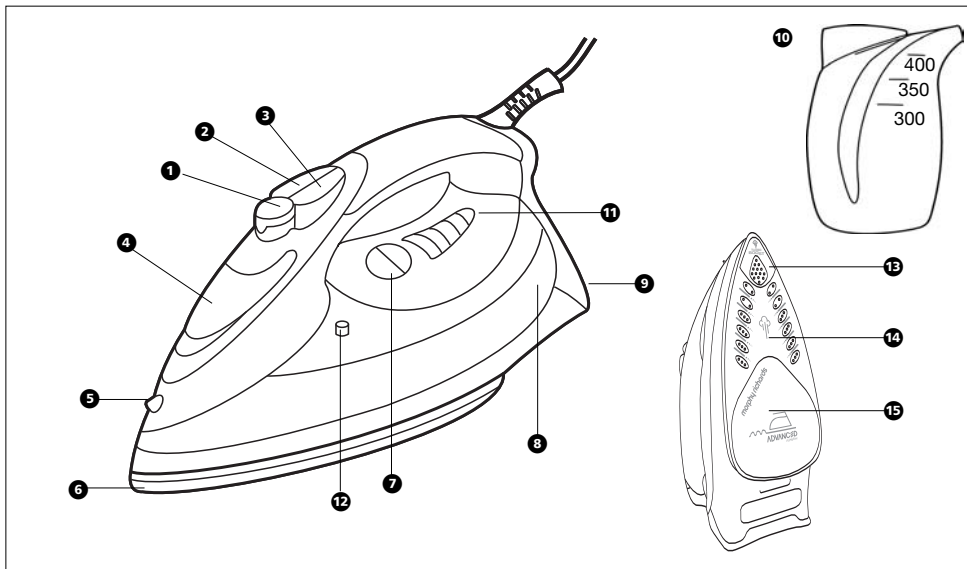

### ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

**WARNING : The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.**

Where used, should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

**WARNING: This appliance must be earthed.**

### Features

- 1 Variable steam button
- 2 Shot of steam button
- 3 Spray button
- 4 Filling hole with cap
- 5 Spray nozzle
- 6 Soleplate
- 7 Temperature console
- 8 Water tank  
*(illuminated on certain models)*
- 9 Life long anti-scale  
*(certain models only)*
- 10 Filling beaker
- 11 Auto shut-off indicator
- 12 Self clean button  
*(certain models only)*

**Soleplate** *(certain models only)*

- 13 **Turbo Tip**  
Powerful shot of steam gets into the trickiest of places
- 14 **Constant Steam**  
Remove all creases at a level you control
- 15 **Press and Set**  
Removes moisture to set a crease-free finish

### Before use

Sort out the items to be ironed according to the type of fabric. This will minimise the frequency of temperature adjustment for different garments.

 
Note: The steam facility should only be used on garments which are suitable for ironing at the 2 and 3 dot settings.

Textiles and clothes are supposed to carry ironing instructions. If they don't you should follow the fabric guide on page 3, but be sure to test the temperature by ironing the hem of the garment or similar area first.

If you turn the control dial down from a hot setting to a cooler setting, wait until the iron temperature has stabilised before you continue ironing.

Delicate fabrics such as silk, wool, velour, etc, are best ironed with an ironing cloth to prevent shine marks.

### Filling

- 1 Make sure that the iron is not plugged in, then set the steam to dry iron selector switch 1 to '0' position before filling the iron with water.
- 2 Lift up the fill cap and fill the water through the filling hole 4 into the water tank 8, using the beaker provided.  1 beaker fills the tank (400ml). On illuminated tank models, use 350ml of water. After filling replace the fill cap. In hard water areas the use of distilled or demineralised water is recommended.



**WARNING: Never use battery topping up fluid or water containing any substances like starch, or sugar, or defrosted water from a refrigerator.**

   
- 3 Always pour out the remaining water after use.

**WARNING: When filling your iron with tap water always use the beaker provided. Never fill directly under the tap.**

### Temperature control

- Default setting + 3 dot (cotton)
- To increase temperature press the top button.
- To decrease temperature press the bottom button.
- The light panel will flash to indicate that the iron has not yet reached the correct temperature.
- Once the correct temperature has been reached, the light will stop flashing and there will be one 'beep' to signal that the iron is now ready for use.

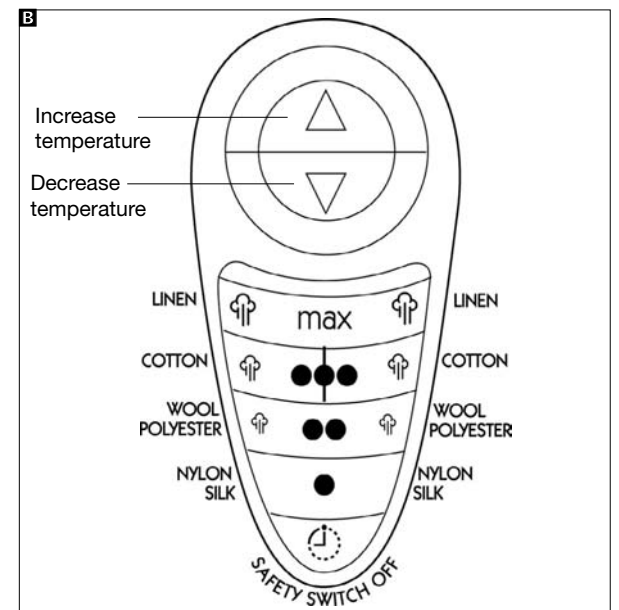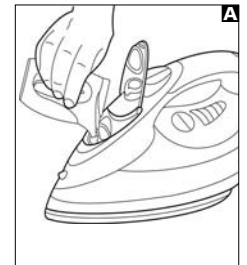

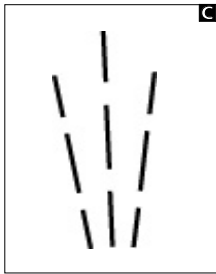

## FEATURES OF YOUR IRON

### Dry ironing

You can use your iron as a dry iron only. Make sure the variable steam control **1** is set to the '0' symbol.

Any temperature setting may be used depending on the garment. The spray feature may be used provided there is water in the tank (see filling section). You do not need to put any water in the tank when dry ironing only.

### Spray **G**

Press the spray button **3** and aim the spray of water at stubborn creases. You can do this whilst dry ironing providing there is water in the tank. When using the water spray it may be necessary to push the button a few times to get the spray pump primed.

### Variable steam

Fill the iron with water as described in 'Filling', page 4 and insert the plug into the electrical socket.

The steam output can be varied from low to high by turning the variable steam control **D**. When using the iron at the bottom of the steam range, the steam output should be adjusted to the low setting.

The steam facility should only be used on garments which are suitable for ironing at 2, 3 dot and MAX setting.

### Shot of steam **E**

Press the shot of steam button **2** to obtain a burst of extra steam for ironing out creases in heavy material such as denim etc.

The shot of steam can be used whilst dry ironing, providing there is water in the tank, and the temperature control is set within the steam range.

Do not use shot of steam at temperatures below the steam range shown on the control dial.

Note: For optimum steam quality, do not operate the shot more than three times in succession.

### Vertical steam

Hold the iron in a vertical position between 1cm and 2cm away from the item **F**. Press the shot of steam button **2**, this will create vertical steam. This feature is especially useful for removing creases from hanging clothes, curtains, wall hangings, etc.

Note; For optimum steam quality, do not operate the shot more than three times in succession.

### No drip system

Your iron is fitted with a no drip system which is designed to prevent water escaping from the soleplate when the iron is too cold.

During use, the no drip system may emit a loud click, particularly during heat-up or whilst cooling down. This is perfectly normal and indicates that the system is functioning correctly.

### Auto shut-off

Your iron is fitted with the auto shut-off function it will automatically shut down after a set period. The 'safety switch off' led will flash on the function panel.

If the iron is left unattended in the horizontal position it will shut down after 30 seconds on certain models and after 1 minute on models with illuminated tanks.

If it is left in the vertical position it will shut down after 8 minutes.

To reactivate the iron gently shake it and wait for the iron to heat-up as normal.

## Life long anti-scale system

The life long anti-scale system reduces scale deposits and helps prolong the life of the iron.

## MAINTENANCE

### Jet cleaning (Certain models)

Your iron has a built in cleaning system designed to keep the water valve, steam chamber and steam vents clear of lint and loose mineral deposits. The 'jet clean' should be operated after each period of ironing.

To operate, ensure that there is little water in the tank, place the iron on its heel and turn the temperature control dial to the maximum setting. Wait for the beep, then unplug the iron and hold it about 6" (150mm) above the sink in the ironing position. Press the shot of steam button about 10 times in succession.

After this cleaning operation, empty out any remaining water.

**WARNING: Do not attempt to descale the soleplate with descaling products.**

### Self cleaning **G**

(Certain models only)

Your iron has a built in cleaning system designed to keep the water valve, steam chamber and steam vents clear of lint and loose mineral deposits.

- 1 Half fill the iron with water.
- 2 Place the iron on its heel.
- 3 Connect to a mains supply outlet.

**4** Set the temperature control to 'MAX'. See 'Temperature control' on page 5.

**5** The indicator light will flash until the required temperature is reached.

**6** The indicator light remains 'on' when the selected temperature is attained.

**7** Disconnect the iron from the mains supply outlet.

**8** Hold the iron horizontally over a sink.

**9** Press and hold down the Self-Cleaning button **12**.

**10** Steam and boiling hot water will drain from the holes in the soleplate, washing away the scale and minerals that have built up inside the Steam Chamber.

**11** Gently move the iron back and forth until the water tank is empty.

**12** When cleaning is complete, release the Self-Cleaning button **12**.

**13** Rest your steam iron back on its heel and allow to fully cool down.

 
 
 
 
 
 
**14** Wipe the soleplate with a cold, damp cloth.

After this cleaning operation, empty out any remaining water.

**WARNING: Keep hands and body away from the hot water.**

### To clean a stainless steel soleplate

To keep the soleplate of your iron clean and free of limescale, we recommend that you use one of the gentle chrome, silver or stainless steel cleaners that are generally available. Always follow the manufacturers instructions. To clean off melted man-made fibres set the iron at 3 dot position and pass it over a clean piece of cotton which will draw the deposit off the surface.

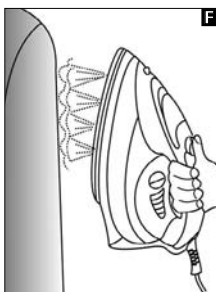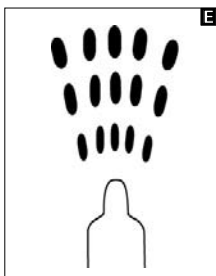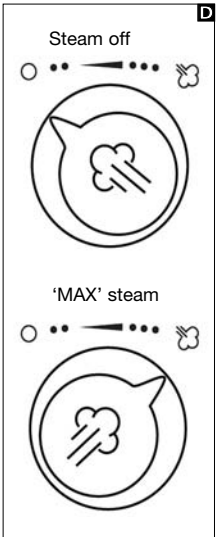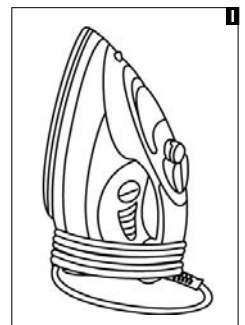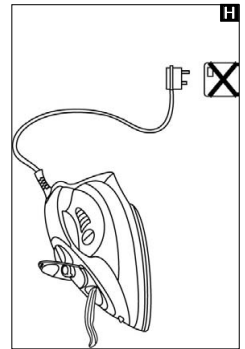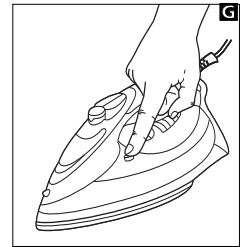

### **To clean a coated soleplate**

In the unlikely event of any man-made fibre fusing to the soleplate, set the iron at the 3 dot position and pass it over a clean piece of cotton which will draw the deposit off the surface.

Do not use scouring powder or solution as this could cause damage to the coating.

### **To clean the exterior**

Allow the iron to cool and wipe over with a damp cloth and mild detergent, then wipe with a dry cloth.

### **Emptying and storing**

When you have finished ironing, unplug your iron. Ensure that the variable steam control is set at the '0' position, lift up the fill cap and empty any remaining water out of the filling hole. Do not store in the box, but in an upright position, so that any drops of water remaining cannot leak out and discolour the soleplate **!**.

Important: The flex can be damaged if wound too tightly around the iron after use. Make a loose loop with the flex and wrap it around the iron. The iron must be cool before winding the flex and storing on its heel **!**.

### **YOUR TWO YEAR GUARANTEE**

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the manufacturers instructions. For example kettles should have been regularly descaled.

### **EXCLUSIONS**

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

### **AUSTRALIAN WARRANTY**

This appliance is guaranteed for 2 years against faulty material, components and workmanship.

This warranty is in addition and does not affect your statutory rights.

Proof of purchase must be produced for any warranty benefit.

In the unlikely event of any appliance proving to be faulty, securely pack and return the item to the place of purchase accompanied by the original receipt or invoice.

### **NOT COVERED BY THIS WARRANTY (Australian only)**

- If the appliance has not been used in accordance with the manufacturers' recommendations or Instructions.
- If the fault is deemed to be caused by abuse, misuse, neglect, modifications or in proper use and or care  
Eg: Kettles: Excessive build up of scale.  
Toasters: Excessive build up of crumbs or foreign matter etc.
- Connection to incorrect voltage to that stamped on the product
- Unauthorised repairs
- Appliance used other than for domestic purposes.
- Excluding bags, filters, glass, carafes, and cutting blades.
- Freight and insurance costs.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of original purchase.

Morphy Richards's policy is to continually improve quality design and product quality. The company therefore reserves the right to change any specifications or to carry out modifications as deemed worthy at any time.

The Australian supplier ASKO Appliances reserves the right to repair, modify, exchange or replace the faulty appliance with the same or similar model or product of equivalent value.

**GB** Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

The After Sales Division,  
Morphy Richards Ltd, Mexborough, South Yorkshire, England, S64 8AJ  
Helpline (office hours) UK 0870 060 2609 Republic of Ireland 1800 409119

**AUS** Australia - Service centre locations

Asko Appliances (Australia) Pty Ltd.  
Victoria  
35 Sunmore Close, Moorabbin. 3189

T: 03 8551 2200

New South Wales  
F3/ 3-9 Birnie Ave., Lidcombe. 2141

T: 02 8748 2900

Queensland  
2/112 Fison Ave., Eagle Farm. 4009

T: 07 3623 2700

South Australia  
45 Hampton Road, Keswick. 5035

T: 08 8292 9500

Western Australia  
15 Walters Drive, Osborne Park. 6017

T: 08 9347 0600

**F** Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

Glen Dimplex France  
Z.I de l'Eglantier  
20, rue des Cerisiers  
91028 Evry cedex 2851  
T: + 33 (0)1 69 11 11 91

F: + 33 (0)1 60 86 15 24

**D** Morphy Richards Produkte sind nur für den Einsatz im Haushalt vorgesehen. Ständige Verbesserungen an der Produktqualität und dem Design gehören zur Philosophie von Morphy Richards. Aus diesem Grunde behält sich die Firma das Recht vor, die Angaben zu ihren Modellen jederzeit zu ändern.

Glen Dimplex Deutschland GmbH  
Otto-Bergner-Str. 28  
96515 Sonneberg  
Service-Hotline-Telefon:  
+49(0) 1805/395-346  
Service-Fax: +49(0) 3675/879-235  
email: service@glendimplex.de

Austria  
Kundendienst  
Merangasse 17  
A-8010 Graz  
Telefon : +42(0) 316/323-041

Telefax: +49(0)316/382-963

**E** Los productos Morphy Richards están concebidos solamente para uso doméstico. Morphy Richards tiene una política de mejora en la calidad y diseño de sus artículos. La compañía, por lo tanto, se reserva el derecho de cambiar en cualquier momento las especificaciones de sus modelos.

Glen Dimplex España  
C/ Bailén, 20. 4º 2ª  
08010 Barcelona  
España  
Tel. 93 238 61 59  
www.glendimplex.es

Fax. 93 238 43 75

Glen Dimplex España  
Servicio de Asistencia Técnica en toda España  
PRESAT S.A.  
Calle Ribes 49-53  
08013 Barcelona, España  
Línea de ayuda (horas de oficina) 93 247 85 70  
presat@presat.net

**NL** De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik. Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV  
Antennestraat 84  
1322 AS Almere  
Nederland

T: +31-(0)-36 538 70 40  
Service: +31-(0)-36-538 70 55  
E: info@glendimplex.nl

www.morphyrichards.nl

**B** Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik. Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV  
Gentsstraat 60  
B- 9300 Aalst  
België  
T: +32-(0)-53 82 88 62  
E: info@glendimplex.be

F: +32-(0)-53 82 88 63  
www.morphyrichards.be

**P** Os produtos Morphy Richards foram concebidos apenas para utilização doméstica. A Morphy Richards respeita uma política de aperfeiçoamento contínuo da qualidade e design do produto. Desta forma, a companhia reserva-se o direito de alterar as especificações destes modelos a qualquer momento.

Glen Dimplex Espanha i Portugal  
Serviço da assistência Técnica em Portugal  
RENASE S.A.  
Rua Antero Quental, 236  
Edifício Europa 4455-586 Parafita  
Portugal  
Linha ajuda (horas de escritório)

T: (351) 229 942 917

**I** I prodotti Morphy Richards sono concepiti esclusivamente per uso domestico. Morphy Richards è costantemente impegnata a migliorare la qualità e il design dei propri prodotti, pertanto si riserva il diritto di modificare le specifiche dei diversi modelli in qualunque momento.

Glen Dimplex Italia Srl  
Via delle Rose 7, 24040 Lallio (BG)  
Assistenza telefonica (Lun-Ven)  
08:30 - 12:30 / 14:00 - 18:00  
T: 035-201042

F: 035-200492

**DK** Morphy Richards produkter er kun beregnet til husholdningsbrug. Det er praksis hos Morphy Richards at fortsætte udviklingen af produktets kvalitet og design. Firmaet forbeholder sig derfor retten til at ændre modellernes specifikationer når som helst.

**S** Produkter från Morphy Richards är endast avsedda för hushållsbruk. Morphy Richards har en policy för kontinuerlig förbättring i produktkvalitet och utformning. Företaget förbehåller sig därför rätten att när som helst ändra specifikationen för sina modeller.

**PL** Produkty Morphy Richards są przeznaczane wyłącznie do użytku domowego. Morphy Richards prowadzi politykę ciągłej poprawy jakości i wzoru produktów. Firma zastrzega sobie prawo zmiany specyfikacji modeli w dowolnej chwili.

Glen Dimplex Polska Sp. z o.o.  
Ul. Strzeszyńska 33  
60-479 Poznań  
NIP 781-16-70-985  
T: + 48 (0)61 8425 805

F: + 48 (0)61 8425 806

**RU** Изделия Morphy Richards предназначены только для бытового использования. Morphy Richards постоянно совершенствует качество и дизайн своей продукции. Таким образом, компания оставляет за собой право в любое время вносить изменения в технические характеристики своих изделий.



**GB** For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

**F** Pour les appareils électriques vendus dans la Communauté européenne. Lorsque les appareils électriques arrivent à la fin de leur vie utile, il ne faut pas les jeter à la poubelle. Il faut les recycler dans des centres spécialisés, s'ils existent. Consultez la municipalité ou le magasin où vous avez acheté l'appareil pour obtenir des conseils sur le recyclage dans votre pays.

**D** Für elektrische Artikel, die in der europäischen Gemeinschaft verkauft werden. Am Ende der Nutzungsdauer sollte das Gerät nicht im regulären Hausmüll entsorgt werden. Bitte einer Recycling-Sammelstelle zuführen. Informationen über geeignete Recycling-Annahmestellen erhalten Sie bei Ihrer Stadt- bzw. Ortsverwaltung.

**E** Para productos eléctricos vendidos en la Comunidad Europea. Al final de su vida útil los productos eléctricos no deberán desecharse con el resto de residuos domésticos. Recíclalos en las instalaciones destinadas para ello. Infórmese sobre consejos de reciclaje en su tienda habitual o consulte a las autoridades locales de su país.

**NL** Voor elektrische producten verkocht in de Europese Gemeenschap. Op het einde van zijn levensduur mag een elektrisch product niet worden meegegeven met het gewone huisvuil. Laat het product recycleren als deze mogelijkheid voorzien is. Vraag bij uw lokale overheid of in uw winkel waar u daarvoor terecht kunt.

**P** Para produtos eléctricos vendidos na Comunidade Europeia. Quando os produtos eléctricos atingirem o final da sua vida útil, não devem ser eliminados juntamente com o lixo doméstico. Faça a reciclagem nos locais apropriados. Contacte as autoridades locais ou o revendedor para saber como efectuar a reciclagem no seu país.

**I** Per gli elettrodomestici venduti all'interno della Comunità europea. Al termine della vita utile, non smaltire l'elettrodomestico nei rifiuti domestici. Riciclarlo laddove esistano le strutture. Verificare con la Locale Autorità o con il dettagliante in merito alle possibilità di riciclaggio nel proprio paese.

**DK** Angående elektriske produkter, der sælges inden for EU. Når det elektriske produkt har nået enden af sin levetid, må det ikke bortkastes sammen med husholdningsaffaldet. Det bedes genbrugt, hvor der er faciliteter hertil. Bed de lokale myndigheder eller forhandleren om råd om genbrug i dit land.

**S** Gäller elektriska produkter som såljs inom Europeiska Unionen. När elektriska produkter inte längre kan användas ska de inte kastas med vanliga hushållsopor. Lämna dem till återvinning där det finns möjlighet. Kontakta lokala myndigheter eller försäljningsstället och kontrollera vad som gäller för återvinning i ditt land.

**PL** Dla produktów elektrycznych sprzedawanych na terenie Wspólnoty Europejskiej. Po zakończeniu okresu używalności produktów elektrycznych, nie należy ich wyrzucać wraz z odpadkami pochodzącymi z gospodarstwa domowego. Jeżeli istnieją odpowiednie zakłady zajmujące się utylizacją, produkty należy poddać recyklingowi. W celu uzyskania porady na temat recyklingu w Twoim kraju zwróć się do miejscowych władz lub lokalnego sprzedawcy.

GB

F

D

E

NL

P

I

DK

S

PL

RU

---

**morphyrichards**

RN40715/40/41MEE Rev 4 10/07

[www.morphyrichards.com](http://www.morphyrichards.com)