

# morphy richards®



## Metallik jug kettle

Please read and keep these instructions

GB

## Bouilloire électrique Metallik

Merci de bien vouloir lire et conserver ces instructions

F

## Wasserkocher Metallik

Lesen Sie diese Bedienungsanleitung, und heben Sie sie gut auf

D

## Hervidor de agua metálico

Lea estas instrucciones atentamente y guárdelas

E

## Metallik waterkoker

Lees deze instructies en houd ze goed bij

NL

## Jarro eléctrico metálico

Leia e guarde estas instruções

P

## Bollitore in metallo

Leggere e conservare le presenti istruzioni

I

## Metallik elkedel

Læs og gem venligst denne vejledning

DK

## Vattenkokare med metallisk kann

Läs och spara dessa anvisningar

S

## Czajnik elektryczny Metallik

Prosimy zapoznać się z niniejszą instrukcją obsługi i zachować ją do wykorzystania w przyszłości

PL

## Металлический электрочайник

Внимательно изучите и сохраните данное руководство

RU

## Varná konvice Metallik

Pfieätúte si tyto pokyny a uschovejte je

CZ

 
## Metallik sürahi su ısıtıcı

Lütfen bu talimatları okuyun ve saklayın

TR



[www.morphyrichards.com](http://www.morphyrichards.com)

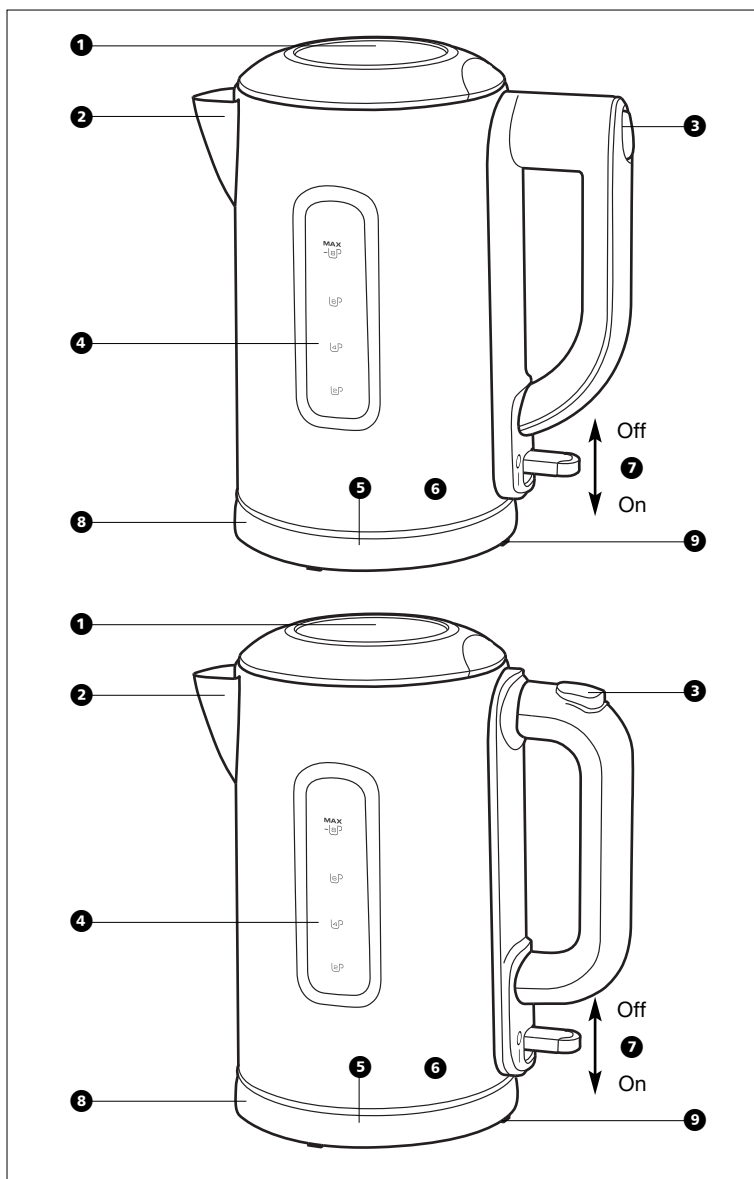

GB

## Getting the best from your new kettle...

### Safety first

Always pour water slowly and carefully to prevent the splashing of scalding water.

### Empty the water out of the kettle after first boiling

To clean away any deposits that are left in the kettle after the manufacturing process.

### Descale as appropriate for the hardness of the water in your area

It is important to descale as the performance of the kettle for auto switch-off will be impaired.

### Fast boil kettles perform differently

If your kettle is a fast boil model, it may sound louder during boiling, and switch off suddenly with no after noise - this is normal.

## IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

### WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition we offer the following safety advice.

### Location

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- **WARNING: Do not place the appliance onto a metal tray or metal surface whilst in use.**

### Mains lead

- Do not let the mains lead hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and table.
- Do not let the lead run across a cooker or other hot area which might damage the cable.
- The mains lead should reach from the socket to the base unit without straining the connections.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## PERSONAL SAFETY

- **WARNING: To protect against fire, electric shock and personal injury do not immerse cord, plug and appliance in water or any other liquid.**
- **WARNING: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- Always keep the top of the cordless base dry, especially around the connection area, disconnect the power supply before drying. Allow to dry thoroughly before reconnection to the power supply.
- Always pour hot water slowly and carefully without tipping the appliance too fast to prevent splashing and spillage.
- Extreme caution must be used when moving a appliance containing hot liquid.
- Do not touch hot surfaces, use handles or knobs.
- Always close the lid if applicable and always have the filter in place, otherwise the kettle may not switch off automatically and may spit out boiling water.
- Avoid contact with emitting steam when the water is boiling or just after it has switched off.
- Take care if opening the lid of the appliance when hot.
- Do not open the lid whilst the water is boiling.
- If the kettle is overfilled, boiling water may be ejected.
- Do not hold the switch in the on position or tamper with the switch to fix it in the on position as this may cause damage to the switch-off mechanism.
- Unplug from the outlet before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.
- Caution: Insure that the kettle is switched off before removing it from its stand.
- The appliance must not be immersed.

### Children

- Never allow a child to operate this appliance.
- Children are vulnerable in the kitchen particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children should be supervised to ensure that they do not play with the appliance.

### Treating scalds

- Run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

## OTHER SAFETY CONSIDERATIONS

- Do not leave appliance unattended whilst in use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not attempt to connect any other appliance to the base unit or this appliance to another base unit.
- Do not tamper with the connector in any way.
- Do not use the appliance for any use other than to boil water.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- The appliance must not be on the base unit when being filled with water.
- Morphy Richards recommends that the mains lead of the cordless base cannot be repaired. If the mains lead is damaged, the cordless base should be discarded and replaced, contact Morphy Richards for advice.
- Unplug from the outlet when not in use.
- Do not move while the kettle is switched on.
- To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

## Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

**WARNING: This appliance must be earthed.**

### UK only

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.**

Where used, should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

## Features

- 1 Lid with finger pad
- 2 Spout filter
- 3 Lid release button
- 4 Water level indicator x 2 with illuminating light
- 5 360° connector (concealed)
- 6 Concealed element
- 7 On/off switch
- 8 Cordless base unit
- 9 Cord storage

## Before first use

Before using the appliance for the first time, fill with water, boil and pour away.

## Operating the appliance

- 1 Wherever possible fill through the spout, as this helps to free the filter from limescale build-up.
  - The integrated water level indicators allow you to easily see the amount of water in the kettle.
  - Always ensure that the appliance is filled until the water is visible through the level indicator.
  - Boil only as much water as you need as this saves electricity.
- 2 Place the appliance on the base unit, ensuring the appliance locates on to the 360° connector.
  - The 360° connector allows the appliance to be located at any position - ideal for left and right handed users and convenient positioning on worktop.
- 3 Plug in and switch on at the wall socket if applicable.
- 4 Switch the appliance on. The water level indicator will light up.
- 5 When the water boils the appliance will switch off automatically.
  - Depending on the model variant you have purchased, the kettle illumination will turn off.
  - If you are using the appliance for the first time, pour away the boiled water and refill.
- 6 Lift the appliance from the base unit by the handle ensuring you hold the appliance level.
  - To re-boil, switch to ON again. If the appliance has just switched off wait a minute or so before switching it back on again.
  - If you do not put in enough water, or switch on the appliance when it is empty, the safety cut-out will switch off the power automatically. If this happens, refill and wait a few minutes for the element to cool, then use as normal.

## Filter removal

- 1 Open the lid.
- 2 Lift the filter upwards from its location using the tab provided.
- 3 To refit the filter, slot it into the side wall guides and press down firmly. Ensure the filter is correctly located into the central guide.

**WARNING: Make sure that the filter is put in correctly otherwise the lid will not close.**

## Descaling

**IMPORTANT:** As this appliance is fitted with a concealed element it must be descaled regularly. The frequency of descaling depends on usage and the hardness of the water in your area.

Excessive scale can cause the appliance to switch off before

boiling and may damage the element invalidating the warranty.

It is essential that regular descaling takes place.

Remove hard scale using a proprietary descaling product suitable for stainless steel, glass or plastic.

For stainless steel kettles please follow the instructions carefully.

Alternatively use citric acid crystals (available from most pharmacies) as follows:

- 1 Fill the appliance 3/4 full, boil, then unplug the appliance (remove the cordless kettle from the base unit) and stand it in an empty sink or bowl.
- 2 Gradually add 50gm of citric acid crystals to the water, then leave the kettle to stand. Do not use a more concentrated solution.
- 3 As soon as the effervescence subsides, empty the appliance and rinse it thoroughly with cold water.
- 4 Wipe the outside of the appliance thoroughly with a damp cloth to remove all traces of acid which may damage the finish.

**IMPORTANT:** Ensure that the electrical connections are completely dry before using the appliance.

## HINTS AND TIPS

## CLEANING AND MAINTENANCE

**WARNING: Always disconnect the plug from the mains and allow the appliance to cool before cleaning.**

Wipe the outside with a damp cloth.

**IMPORTANT:** Do not use abrasive cleaners on the outside of the appliance which may scratch the surface.

## HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product.
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

## YOUR TWO YEAR GUARANTEE

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before

leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the instructions supplied. For example crumb trays should have been emptied regularly.

GB

## Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
- 7 Batteries and damage from leakage are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

## AUSTRALIAN WARRANTY

This appliance is guaranteed for 2 years against faulty material, components and workmanship.

This warranty is in addition and does not affect your statutory rights.

Proof of purchase must be produced for any warranty benefit.

In the unlikely event of any appliance proving to be faulty, securely pack and return the item to the place of purchase accompanied by the original receipt or invoice.

## NOT COVERED BY THIS WARRANTY (Australian only)

- If the appliance has not been used in accordance with the manufacturers' recommendations or Instructions.
- If the fault is deemed to be caused by abuse, misuse, neglect, modifications or in proper use and or care  
Eg: Kettles: Excessive build up of scale.  
Toasters: Excessive build up of crumbs or foreign matter etc.
- Connection to incorrect voltage to that stamped on the product
- Unauthorised repairs
- Appliance used other than for domestic purposes.
- Excluding bags, filters, glass, carafes, and cutting blades.
- Freight and insurance costs.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of original purchase.

Morphy Richards's policy is to continually improve quality design and product quality. The company therefore reserves the right to change any specifications or to carry out modifications as deemed worthy at any time.

The Australian supplier ASKO Appliances reserves the right to repair, modify, exchange or replace the faulty appliance with the same or similar model or product of equivalent value.

## F

### Pour utiliser au mieux votre nouvelle bouilloire...

#### Priorité à la sécurité

Versez toujours l'eau lentement et avec soin pour éviter toute éclaboussure d'eau bouillante.

#### Videz l'eau de la bouilloire après la première utilisation

Pour supprimer les dépôts pouvant rester dans la bouilloire après le processus de fabrication.

#### Déterminez l'appareil en fonction de la dureté de l'eau de votre région

Il est important de déterminer la bouilloire, car le tartre affecte son efficacité et gêne le fonctionnement de l'arrêt automatique.

#### Les bouilloires "Fast boil" fonctionnent différemment

Si votre bouilloire est un modèle "Fast boil", elle vous semblera peut-être plus bruyante pendant l'ébullition et elle s'arrêtera d'un coup, en même temps que le bruit – ceci est normal.

### CONSIGNES DE SÉCURITÉ IMPORTANTES

Lorsque vous utilisez tout appareil électrique, vous devez respecter des consignes de sécurité de bon sens.

Tout appareil électrique peut blesser ou même provoquer la mort. Vous risquez également d'endommager l'appareil. Ces dangers sont indiqués dans le texte par les deux conventions suivantes :

#### **DANGER : Risque de blessure !**

**IMPORTANT :** Risque pour l'appareil !

Nous vous donnons également les conseils de sécurité suivants.

#### Positionnement

- Positionnez toujours votre appareil loin du bord du plan de travail.
- Utilisez l'appareil sur une surface solide et plate.
- N'utilisez jamais l'appareil à l'extérieur ou près d'une source d'eau.
- **DANGER : Ne placez pas la bouilloire sur un plateau en métal ou sur une surface métallique pendant qu'elle fonctionne.**

#### Cordon d'alimentation secteur

- Ne laissez pas le cordon d'alimentation dépasser du bord d'un plan de travail, à un endroit où un enfant pourrait l'atteindre.
- Ne laissez jamais le cordon traverser un espace accessible, par exemple entre une prise murale basse et une table.
- Ne laissez jamais le cordon passer sur une cuisinière ou toute autre surface chaude qui pourrait l'endommager.
- Positionnez l'appareil de manière à ce que le cordon

**GB** Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

The After Sales Division,  
Morphy Richards Ltd, Mexborough, South Yorkshire, England, S64 8AJ  
Helpline (office hours) UK 0845 077 7700 Republic of Ireland 1800 409119

**AUS** Australia - Service centre locations

Asko Appliances (Australia) Pty Ltd.  
Victoria  
35 Sunmore Close, Moorabbin. 3189 T: 03 8551 2200

New South Wales  
F3/ 3-9 Birnie Ave., Lidcombe. 2141 T: 02 8748 2900

Queensland  
2/112 Fison Ave., Eagle Farm. 4009 T: 07 3623 2700

South Australia  
45 Hampton Road, Keswick. 5035 T: 08 8293 1833

Western Australia  
15 Walters Drive, Osborne Park. 6017 T: 08 9244 4366

**F** Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

Glen Dimplex France  
Z.I de l'Eglantier  
20, rue des Cerisiers  
91028 Evry cedex 2851  
T: + 33 (0)1 69 11 11 91 F: + 33 (0)1 60 86 15 24

**D** Morphy Richards Produkte sind nur für den Einsatz im Haushalt vorgesehen. Ständige Verbesserungen an der Produktqualität und dem Design gehören zur Philosophie von Morphy Richards. Aus diesem Grunde behält sich die Firma das Recht vor, die Angaben zu ihren Modellen jederzeit zu ändern.

Glen Dimplex Deutschland GmbH  
Service-Hotline: +49(0) 1805/398 346 (0,14 Euro/Min)  
Service-Fax: +49(0) 1805/355 467  
email: service@glendimplex.de

Österreich  
Kundendienst  
Merangasse 17  
A-8010 Graz  
Telefon : +43(0) 316/323-041 Telefax: +43(0)316/382-963

**E** Los productos Morphy Richards están concebidos solamente para uso doméstico. Morphy Richards tiene una política de mejora en la calidad y diseño de sus artículos. La compañía, por lo tanto, se reserva el derecho de cambiar en cualquier momento las especificaciones de sus modelos.

Glen Dimplex España  
C/ Bailén, 20, 4º 2º  
08010 Barcelona  
España  
Tel. 93 238 61 59 Fax. 93 238 43 75  
www.glendimplex.es

Glen Dimplex España  
Servicio de Asistencia Técnica en toda España  
PRESAT S.A.  
Calle Ribes 49-53  
08013 Barcelona, España  
Línea de ayuda (horas de oficina) 93 247 85 70  
presat@presat.net

**NL** De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik. Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV  
Antennestraat 84  
1322 AS Almere  
Nederland  
T: +31-(0)-36 538 70 40 F: +31-(0)-36-538 70 41  
Service: +31-(0)-36-538 70 55  
E: info@glendimplex.nl www.morphyrichards.nl

**B** Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik. Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV  
Gentsestraat 60  
B- 9300 Aalst  
België  
T: +32-(0)-53 82 88 62 F: +32-(0)-53 82 88 63  
E: info@glendimplex.be www.morphyrichards.be

**P** Os produtos Morphy Richards foram concebidos apenas para utilização doméstica. A Morphy Richards respeita uma política de aperfeiçoamento contínuo da qualidade e design do produto. Desta forma, a companhia reserva-se o direito de alterar as especificações destes modelos a qualquer momento.

Importação Lda  
Rua D. Marcos Da Cruz 1281  
4455-482 Perafita  
Portugal  
T: +351 22 996 67 40 Fax: +351 22 996 67 41

**I** I prodotti Morphy Richards sono concepiti esclusivamente per uso domestico. Morphy Richards è costantemente impegnata a migliorare la qualità e il design dei propri prodotti, pertanto si riserva il diritto di modificare le specifiche dei diversi modelli in qualunque momento.

Glen Dimplex Italia Srl  
Via delle Rose 7, 24040 Lallio (BG)  
Assistenza telefonica (Lun-Ven)  
08:30 - 12:30 / 14:00 - 18:00  
T: 035-201042 F: 035-200492

**DK** Morphy Richards produkter er kun beregnet til husholdningsbrug. Det er praksis hos Morphy Richards at fortsætte udviklingen af produktets kvalitet og design. Firmaet forbeholder sig derfor retten til at ændre modelernes specifikationer når som helst.

**S** Produkter från Morphy Richards är endast avsedda för hushållsbruk. Morphy Richards har en policy för kontinuerlig förbättring i produktkvalitet och utformning. Företaget förbehåller sig därför rätten att när som helst ändra specifikationen för sina modeller.

 
 
**PL** Produkty Morphy Richards są przeznaczone wyłącznie do użytku domowego. Morphy Richards prowadzi politykę ciągłej poprawy jakości i wzoru produktów. Firma zastrzega sobie prawo zmiany specyfikacji modeli w dowolnej chwili.

Glen Dimplex Polska Sp. z o.o.  
Ul. Strzeszyńska 33  
60-479 Poznań  
NIP 781-16-70-985  
T: + 48 (0)61 8425 805 F: + 48 (0)61 8425 806

**RU** Изделия Morphy Richards предназначены только для бытового использования. Morphy Richards постоянно совершенствует качество и дизайн своей продукции. Таким образом, компания оставляет за собой право в любое время вносить изменения в технические характеристики своих изделий.

**CZ** Výrobky Morphy Richards jsou určeny pouze k použití v domácnostech. Morphy Richards usiluje o neustálé zdokonalování kvality a provedení. Proto si vyhrazuje právo kdykoliv změnit specifikace svých modelů.

**TR** Morphy Richards ürünleri sadece evde kullanım içindir. Morphy Richards ürün kalitesi ve tasarımı sürekli olarak iyileştirme politikasına sahiptir. Bu nedenle şirket modellerinin teknik özelliklerinde herhangi bir zamanda değişiklik yapma hakkına sahiptir.



**morphy richards®**

KT43843MEE Rev 1 03/09

[www.morphyrichards.com](http://www.morphyrichards.com)

