

morphy richards®



2-slice toasters

Please read and keep these instructions

Grille-pains 2 tranches

Merci de bien vouloir lire et conserver ces instructions

Toaster für 2 Toastscheiben

Lesen Sie diese Bedienungsanleitung, und heben Sie sie gut auf.

Tostadoras de 2 rebanadas

Lea y guarde estas instrucciones.

Broodroosters voor twee sneetjes

Lees deze gebruiksaanwijzing en bewaar hem goed

Torradeiras de 2 fatias

Leia e guarde estas instruções

Tostapane per 2 fette

Leggere e conservare le presenti istruzioni

Brødrister til 2 skiver

Læs og gem denne vejledning

Brödrost för 2 skivor

Läs och spara dessa instruktioner

Tostery 2-szczelinowe

Prosimy zapoznać się z niniejszą instrukcją obsługi i zachować ją do użytku w przyszłości

Тостер на 2 ломтика

Внимательно изучите и сохраните данное руководство

GB

F

D

E

NL

P

I

DK

 
 
 
 
S

PL

RU



www.morphyrichards.com

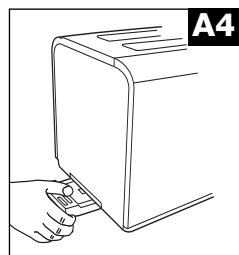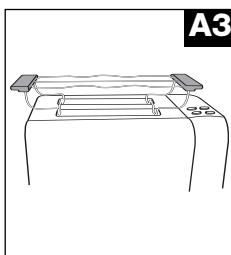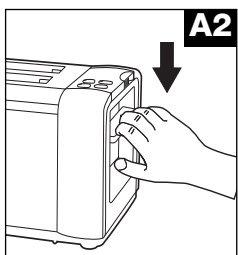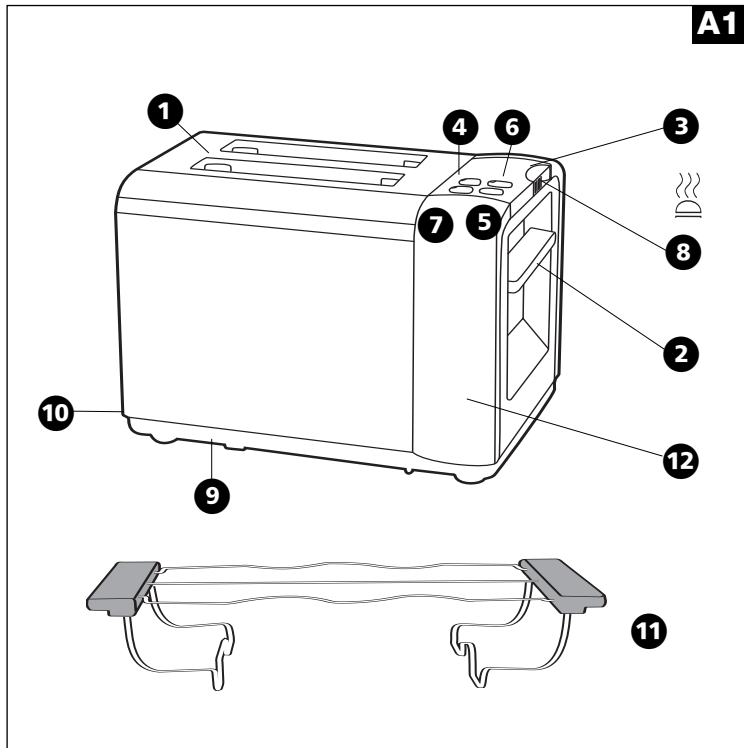

GB

Getting the best from your new toaster...

- **Safety first**
Do not touch metal top of the toaster during or after use as it gets very hot.
- **Empty crumb tray regularly**
To clean away any crumbs that accumulate after use.
- **In order to achieve uniform browning**
Wait a minimum of 30 seconds between each toasting, so that the control can automatically reset.

Important safety instructions

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition we offer the following safety advice.

Location

- Always locate your toaster away from the edge of the worktop.
- Ensure that the toaster is used on a firm, flat, heat resistant surface.
- Ensure that sufficient space is left above and around all sides of your toaster to allow air to circulate.
- IMPORTANT: Do not use too close to curtains, draperies, walls, cupboards and other flammable materials.
- The bread may burn, therefore do not use the appliance near or below combustible material such as curtains.

- **WARNING: Do not use underneath cupboards.**
- Do not use outdoors or near water.

Mains lead

- The mains lead should reach from the socket to the toaster without straining the connections. Reduce the length of the excess lead by using the cord storage facility.
- Do not let the mains lead hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and table.
- Do not let the lead run across a cooker or hot area which might damage the cable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Personal safety

- Do watch your toaster during use.
- **WARNING: Do not immerse cord, plug or toaster in water or other liquid.**
- **WARNING: Do not touch the top of the toaster or other hot parts during or after use, use handles or knobs.**
- **WARNING: Do not insert oversize foods, metal, foil packages or utensils into the toaster.**
- **WARNING: Do not attempt to dislodge food when the toaster is plugged in and never insert cooking utensils into the slots.**
- IMPORTANT: Do not place bread or other items on top of the slots as this may damage the toaster and creates a fire hazard.
- This appliance is not attended for use of persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless

GB

they have been given supervision or instruction concerning use of the application by a person responsible for their safety.

Children

- Never allow a child to operate this appliance.
- Children are vulnerable in the kitchen particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children should be supervised to ensure that they do not play with the appliance.

Other safety considerations

- Do not operate with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not attempt repairs - the appliance contains no user-serviceable parts. Call Morphy Richards for advice.
- Do not use accessories not recommended by the manufacturer.
- Do not place on or near a hot gas electric burner or in a heated oven.
- Only use for intended purpose.
- Unplug from outlet when not in use and when cleaning.
- Do not move the appliance whilst hot.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).

WARNING: This appliance must be earthed.

UK Only

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

WARNING : The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Where used, should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

Before first use

Before using the toaster for the first time operate the toaster without bread in a ventilated room.

- The bread carriage lever **2** will not stay down unless the toaster is connected to the mains supply.
- As with all new electric heating elements, your toaster emits a 'new' smell when it is first switched on which is quite normal.

Features **A1**

- 1** Bread slots
- 2** Bread carriage lever with high lift feature
- 3** Electronic variable browning control
- 4** Bagel button
- 5** Cancel button
- 6** Re-heat button
- 7** Frozen button
- 8** Bun warmer setting (on browning control)
- 9** Cord storage
- 10** Removable crumb tray
- 11** Bun warmer
- 12** Illuminated panel

Toasting

- 1 Select the desired level of browning on the browning control **3** marked 1 to 8. The setting required will vary according to the moisture content and thickness of the bread.
 - 2 After selecting the desired level, place your bread in the slots **1** and depress the bread carriage lever **2** downwards until it locks. The end panel will illuminate **A2**.
 - 3 After the set time has been reached the bread will pop up automatically ready for removal from the slots. The bread carriage lever will have returned to its upper position and the heating element will have switched off.
- If the bread in your toaster becomes jammed disconnect your toaster at the socket, allow it to cool, then remove the bread.
 - When not in use, remove the plug from the mains socket.
 - Allow the toaster to cool fully before putting away.

WARNING: Do not wrap the cable around the main body of the appliance during or after use.

Using the re-heat button

If your toast has popped up and gone cold, the toaster offers a re-heat facility. To use, depress the bread carriage lever and press the re-heat button **6** immediately. The button will illuminate and the toaster will operate for a short period re-heating the bread.

Using the cancel button

If you wish to interrupt the toasting process, press the cancel button **5**.

Using the frozen button

To toast frozen bread do not adjust the browning control from your normal preferred setting, place the bread normally in the bread slots, then depress the bread carriage lever and press the frozen button **7**.

Using the bagel button

To toast bagels, set the browning control to your preferred setting.

Cut the bagels in half. Place the side that you would prefer to be browner towards the centre. Depress the bread carriage lever and press the bagel button **4**.

On the 4 slice version the bagel button only works on the 2 slice option.

For frozen bagels also press the frozen button.

GB

Using the bun warmer

Unfold the legs of the bun rack and clip it on top of the toaster ensuring it is securely in place **A3**.

Place the buns or other items onto the bun warmer. Set the browning control to the bun warmer position **8**. Depress the bread carriage lever until it holds down. Wait for the toaster to switch off automatically or press the cancel button to switch the toaster off before removing the buns.

WARNING: Take care not to touch the metal of the bun warmer as it will be hot.

Do not put more than two buns on the bun warmer at any one time.

Hints & tips for perfect toasting

- For best results ensure the bread slices are of even thickness, freshness and size.
- Stale bread toasts more rapidly than fresh bread. Therefore, the browning control should be set at a lower setting than usual.
- Thin bread toasts quicker than thick.
- In order to achieve uniform browning, we recommend you wait a minimum of 30 seconds between each toasting so that the control automatically resets.
- If toasting one slice only, you may need to adjust the browning control to a slightly lower setting.


- You may notice a slight variation in toast colour on one side of a single slice.
- All sorts of bread can be used as well as teacakes, small rolls etc. Slices should not however be so thick as to cause burning or jamming within the bread slots.
- When toasting two or more slices it is recommended they are of equal size and freshness.

Cleaning and maintenance

- 1 After use and before cleaning, remove the plug from the wall socket and wait for the toaster to cool.
 - 2 Wipe the outside of the toaster with a damp cloth only and dry with another cloth or tissue.
- NEVER use metal polish or coarse scouring agents and never immerse your toaster in any sort of liquid.
 - NEVER use any pointed or sharp articles for cleaning the inside, otherwise the heating element will be damaged.
 - NEVER use a brush or push your fingers or metal objects down the slots.

Crumb tray A4

WARNING: Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically.

When the toaster has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toasting chamber and remove the crumb tray . Empty the tray and replace it.

Never operate the toaster without the crumb tray fitted.

YOUR TWO-YEAR GUARANTEE

This appliance is covered by two-year repair or replacement warranty.

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no. Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact Morphy Richards quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase.

Subject to the exclusions set out below (1-6) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2-year guarantee the appliance must have been used according to the manufacturers instructions. For example, appliances must have been descaled and filters must have been kept clean as instructed.

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
 - If the fault is deemed to be caused by abuse, misuse, neglect, modifications or in proper use and or care
Eg: Kettles: Excessive build up of scale.
Toasters: Excessive build up of crumbs or foreign matter etc.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
 - Connection to incorrect voltage to that stamped on the product
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - Unauthorised repairs
- 4 Where the appliance has been used for hire purposes or non domestic use.
 - Appliance used other than for domestic purposes.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
 - Excluding bags, filters, glass, carafes, and cutting blades.
- 6 The guarantee excludes consumables such as bags, filters and glass carafes.
 - Freight and insurance costs.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of original purchase.

Morphy Richards's policy is to continually improve quality design and product quality. The company therefore reserves the right to change any specifications or to carry out modifications as deemed worthy at any time.

The Australian supplier ASKO Appliances reserves the right to repair, modify, exchange or replace the faulty appliance with the same or similar model or product of equivalent value.

AUSTRALIAN WARRANTY

This appliance is guaranteed for 2 years against faulty material, components and workmanship.

This warranty is in addition and does not affect your statutory rights.

Proof of purchase must be produced for any warranty benefit.

In the unlikely event of any appliance proving to be faulty, securely pack and return the item to the place of purchase accompanied by the original receipt or invoice.

NOT COVERED BY THIS WARRANTY (Australian only)

- If the appliance has not been used in accordance with the manufacturers' recommendations or Instructions.
- **Priorité à la sécurité**
Ne touchez pas le dessus métallique du grille-pain pendant et après l'usage car il devient très chaud.
- **Videz le tiroir ramasse miettes régulièrement**
Pour enlever toutes les miettes qui s'accumulent après l'utilisation.

GB

F

F

Pour utiliser au mieux votre nouveau grille-pain ...

- GB** Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

The After Sales Division,
Morphy Richards Ltd, Mexborough, South Yorkshire, England, S64 8AJ
Helpline (office hours) UK 0844 871 0955 Republic of Ireland 1800 409119

AU Australia - Service centre locations

Asko Appliances (Australia) Pty Ltd.
Victoria

35 Sunmore Close, Moorabbin. 3189 T: 03 8551 2200

New South Wales

F3/ 3-9 Birnie Ave., Lidcombe. 2141 T: 02 8748 2900

Queensland

27/12 Fison Ave., Eagle Farm. 4009 T: 07 3623 2700

South Australia

45 Hampton Road, Keswick. 5035 T: 08 8293 1833

Western Australia

15 Walters Drive, Osborne Park. 6017 T: 08 9244 4366

- F** Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

Glen Dimplex France
Z.I de l'Eglantier
20, rue des Cersiers
91028 Evry cedex 2851
T: + 33 (0)1 69 11 11 91

F: + 33 (0)1 60 86 15 24

- D** Morphy Richards Produkte sind nur für den Einsatz im Haushalt vorgesehen. Ständige Verbesserungen an der Produktqualität und dem Design gehören zur Philosophie von Morphy Richards. Aus diesem Grunde behält sich die Firma das Recht vor, die Angaben zu ihren Modellen jederzeit zu ändern.

Glen Dimplex Deutschland GmbH
Service-Hotline:
+49(0) 1805/395-346 (14 Cent/Min)
Service-Fax: +49(0) 3675/879-235
email: service@glendimplex.de

Österreich
Kundendienst
Merangasse 17
A-8010 Graz
Telefon : +42(0) 316/323-041

Telefax: +49(0)316/382-963

- E** Los productos Morphy Richards están concebidos solamente para uso doméstico. Morphy Richards tiene una política de mejora en la calidad y diseño de sus artículos. La compañía, por lo tanto, se reserva el derecho de cambiar en cualquier momento las especificaciones de sus modelos.

Glen Dimplex España
C/ Bailén, 20. 4º 2ª
08010 Barcelona
España
Tel. 93 238 61 59
www.glendimplex.es

Fax. 93 238 43 75

Glen Dimplex España
Servicio de Asistencia Técnica en toda España
PRESAT S.A.
Calle Ribes 49-53
08013 Barcelona, España
Línea de ayuda (horas de oficina) 93 247 85 70
presat@presat.net

- NL** De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik. Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV
Antennestraat 84
1322 AS Almere
Nederland

T: +31-(0)-36 538 70 40
Service: +31-(0)-36-538 70 55
E: info@glendimplex.nl

F: +31-(0)-36-538 70 41

www.morphyrichards.nl

- B** Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik.

Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV
Gentsstraat 60
B- 9300 Aalst
België

T: +32-(0)-53 82 88 62
E: info@glendimplex.be

F: +32-(0)-53 82 88 63
www.morphyrichards.be

- P** Os produtos Morphy Richards foram concebidos apenas para utilização doméstica.

A Morphy Richards respeita uma política de aperfeiçoamento contínuo da qualidade e design do produto. Desta forma, a companhia reserva-se o direito de alterar as especificações destes modelos a qualquer momento.

Imporaudio Lda

Rua D. Marcos Da Cruz 1281
4455-482 Perafita
Portugal

T: +351 22 996 67 40 Fax: +351 22 996 67 41

- I** I prodotti Morphy Richards sono concepiti esclusivamente per uso domestico. Morphy Richards è costantemente impegnata a migliorare la qualità e il design dei propri prodotti, pertanto si riserva il diritto di modificare le specifiche dei diversi modelli in qualunque momento.

Glen Dimplex Italia Srl
Via delle Rose 7, 24040 Lallio (BG)
Assistenza telefonica (Lun-Ven)
08:30 - 12:30 / 14:00 - 18:00
T: 035-201042

F: 035-200492

- DK** Morphy Richards produkter er kun beregnet til husholdningsbrug. Det er praksis hos Morphy Richards at fortsætte udviklingen af produktets kvalitet og design. Firmaet forbeholder sig derfor retten til at ændre modellernes specifikationer når som helst.

- S** Produkter från Morphy Richards är endast avsedda för hushållsbruk. Morphy Richards har en policy för kontinuerlig förbättring i produktkvalitet och utformning. Företaget förbehåller sig därför rätten att när som helst ändra specifikationerna för sina modeller.

- PL** Produkty Morphy Richards są przeznaczone wyłącznie do użytku domowego. Morphy Richards prowadzi politykę ciągłej poprawy jakości i wzoru produktów. Firma zastrzega sobie prawo zmiany specyfikacji modeli w dowolnej chwili.

Glen Dimplex Polska Sp. z o.o
Ul. Strzeszyńska 33
60-479 Poznań
NIP 781-16-70-985
T: + 48 (0)61 8425 805

 
 
F: + 48 (0)61 8425 806

- RU** Изделия Morphy Richards предназначены только для бытового использования. Morphy Richards постоянно совершенствует качество и дизайн своей продукции. Таким образом, компания оставляет за собой право в любое время вносить изменения в технические характеристики своих изделий.



- GB** For electrical products sold within the European Community.
At the end of the electrical products useful life it should not be disposed of with household waste.
Please recycle where facilities exist.
Check with your Local Authority or retailer for recycling advice in your country.
- F** Pour les appareils électriques vendus dans la Communauté européenne.
Lorsque les appareils électriques arrivent à la fin de leur vie utile, il ne faut pas les jeter à la poubelle.
Il faut les recycler dans des centres spécialisés, s'ils existent.
Consultez la municipalité ou le magasin où vous avez acheté l'appareil pour obtenir des conseils sur le recyclage dans votre pays.
- D** Für elektrische Artikel, die in der europäischen Gemeinschaft verkauft werden.
Am Ende der Nutzungsdauer sollte das Gerät nicht im regulären Hausmüll entsorgt werden.
Bitte einer Recycling-Sammelstelle zuführen.
Informationen über geeignete Recycling-Annahmestellen erhalten Sie bei Ihrer Stadt- bzw. Ortsverwaltung.
- E** Para productos eléctricos vendidos en la Comunidad Europea.
Al final de su vida útil los productos eléctricos no deberán desecharse con el resto de residuos domésticos.
Recíclelos en las instalaciones destinadas para ello.
Infórmese sobre consejos de reciclaje en su tienda habitual o consulte a las autoridades locales de su país.
- NL** Voor elektrische producten verkocht in de Europese Gemeenschap.
Op het einde van zijn levensduur mag een elektrisch product niet worden meegegeven met het gewone huisvuil.
Laat het product recycleren als deze mogelijkheid voorzien is.
Vraag bij uw lokale overheid of in uw winkel waar u daarvoor terecht kunt.
- P** Para produtos eléctricos vendidos na Comunidade Europeia.
Quando os produtos eléctricos atingirem o final da sua vida útil, não devem ser eliminados juntamente com o lixo doméstico.
Faça a reciclagem nos locais apropriados.
Contacte as autoridades locais ou o revendedor para saber como efectuar a reciclagem no seu país.
- I** Per gli elettrodomestici venduti all'interno della Comunità europea.
Al termine della vita utile, non smaltire l'elettrodomestico nei rifiuti domestici.
Riciclarlo laddove esistano le strutture.
Verificare con la Locale Autorità o con il dettagliante in merito alle possibilità di riciclaggio nel proprio paese.
- DK** Angående elektriske produkter, der sælges inden for EU.
Når det elektriske produkt har nået enden af sin levetid, må det ikke bortkastes sammen med husholdningsaffaldet.
Det bedes genbrugt, hvor der er faciliteter hertil.
Bed de lokale myndigheder eller forhandleren om råd om genbrug i dit land.
- S** Gäller elektriska produkter som säljs inom Europeiska Unionen.
När elektriska produkter inte längre kan användas ska de inte kastas med vanliga hushållsoppor.
Lämna dem till återvinning där det finns möjlighet.
Kontakta lokala myndigheter eller försäljningsstället och kontrollera vad som gäller för återvinning i ditt land.
- PL** Dla produktów elektrycznych sprzedawanych na terenie Wspólnoty Europejskiej.
Po zakończeniu okresu używalności produktów elektrycznych, nie należy ich wyrzucać wraz z odpadkami pochodzącymi z gospodarstwa domowego.
Jeżeli istnieją odpowiednie zakłady zajmujące się utylizacją, produkty należy poddać recyklingowi.
W celu uzyskania porady na temat recyklingu w Twoim kraju zwróć się do miejscowych władz lub lokalnego sprzedawcy.





morphyrichards®

TT44417MEE Rev 2 08/08

www.morphyrichards.com

