

**morphy richards®**

smart ideas for your home


Filter Coffee Maker with Timer and Glass Carafe

# INSTRUCTION MANUAL

Model: MRSGFC18B / MRSGFC18G / MRSGFC18GN

Read these instructions carefully before  
using this appliance for the first time.

**STORE THESE INSTRUCTIONS CAREFULLY**

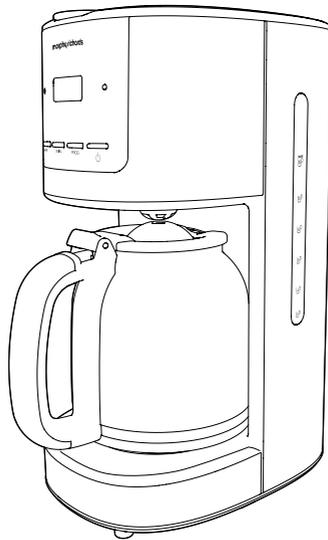

For product hints and tips plus more join us at

[www.morphyrichards.com.au](http://www.morphyrichards.com.au)



facebook.com/MorphyRichardsAUS




instagram.com/morphyrichardsau

## SPECIFICATIONS

Model:	MMSGFC18B	MMSGFC18G	MMSGFC18GN
Colour:	BLACK	OCEAN GREY	BISTRO GREEN
Rated Voltage:	220-240V~50-60Hz		
Rated Power:	900W		
Capacity:	1.5L		
External Dimensions (L x W x H):	173 x 279 x 368 mm		
Net Weight:	1.8 Kg		

## NAMES OF PARTS AND ACCESSORIES

1. Lid
2. Removable Permanent Filter
3. Removable Filter Holder
4. Coffee Dispenser Valve
5. Water Reservoir
6. Green Programme Light
7. Display Screen
8. Red Heating Light
9. Hour Button
10. Minute Button
11. Auto/Prog Button
12. On/Off Button
13. Lid Open Lever
14. Carafe Lid
15. Glass Carafe
16. Water Gauge
17. Coffee Spoon
18. Hotplate

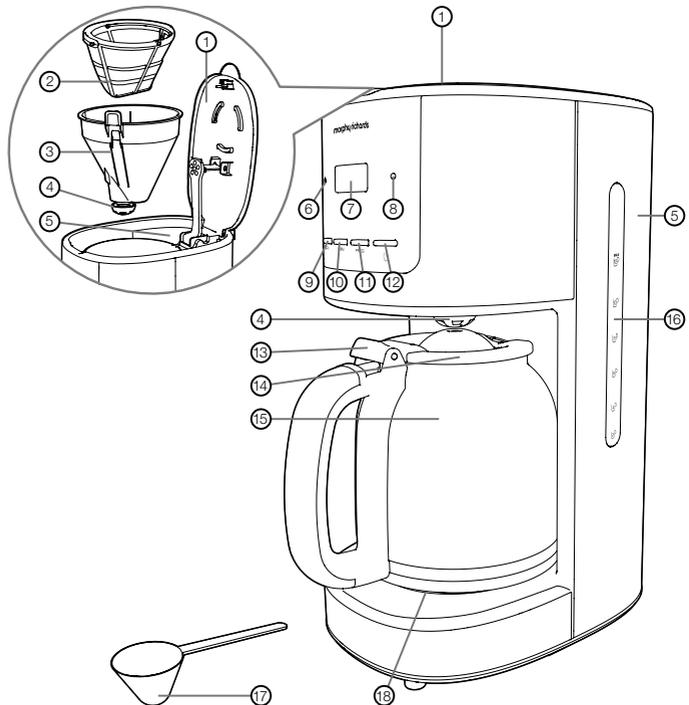

## HEALTH & SAFETY

The use of any electrical appliance requires the following common sense safety rules. Please read these instructions carefully before using the product.

**WARNING:** This appliance incorporates a heating element which is subject to residual heat after use.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- For care and cleaning, refer to 'Cleaning your Coffee Maker' section.

**WARNING: Misuse of appliance could cause personal injury.**

- The appliance has a heating element which is subject to residual heat after use.
- Keep the appliance and cord out of the reach of children.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as: farm houses, by clients in hotels, motels and other residential type environments; bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.

**Location**

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.

**WARNING: Do not place the appliance onto a metal tray or metal surface whilst in use.**

**Mains cable**

- The supply cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Do not let the mains cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.

**Personal safety**

- **WARNING:** To protect against fire, electric shock and personal injury do not immerse cord, plug and appliance in water or any other liquid.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Unplug from the outlet before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.
- Do not move the Coffee Maker while switched on.

**Other safety considerations**

- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.

- Do not use the appliance for any use other than its intended purpose.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- **WARNING:** The appliance must not be immersed for cleaning.
- **CAUTION:** To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and detergent.

## Electrical requirements

- **WARNING:** This appliance must be earthed.

## BEFORE FIRST USE

- Take your Coffee Maker out of the box and remove the packaging.
- Wash the detachable parts of the machine in warm soapy water.
- The first time you use your Coffee Maker, operate the Coffee Maker with water only.

## SETTING THE CLOCK

When the Coffee Maker is plugged in, 12:00 AM will appear on the Display Screen (7).

To set the time, use the Hour (9) and Minute (10) Buttons. The display is a 12 hour clock.

When the Coffee Maker is in standby mode, you can use the Hour and Minute Buttons to adjust the clock.


## REFILLING YOUR COFFEE MAKER

Allow 3 minutes to cool before refilling with cold water.

## CLEANING YOUR COFFEE MAKER



- Unplug the Coffee Maker and allow to cool.
- Do not immerse the Coffee Maker in liquid.
- Rinse the Water Reservoir (5) occasionally with cold water. Do not use a cloth as any residue or lint may be left behind to clog the Coffee Maker.
- Remove the Permanent Filter (2), discard any used coffee and wash. Extended soaking helps to remove coffee stains from the mesh.
- Wash the Glass Carafe (15), Carafe Lid (14), and Removable Filter Holder (3) in warm soapy water. Rinse and dry all parts thoroughly. Refit the Permanent Filter (2) and Filter Holder.
- Wipe all external surfaces with a damp cloth and dry thoroughly.
- Care must be taken to ensure that the non-drip Coffee Dispenser Valve (4) situated on the bottom of the Removable Filter Holder is not damaged during cleaning.
- Never use harsh or abrasive cleaners.
- NO parts are suitable for cleaning in a dishwasher.

## USING YOUR COFFEE MAKER


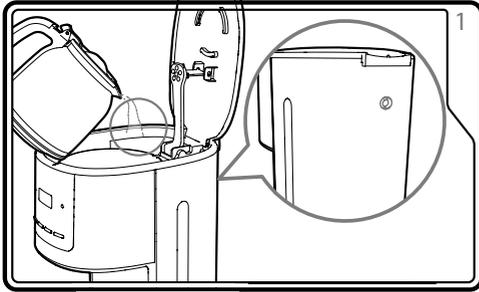


1. Fill the Water Reservoir (5) with cold water. Do not overfill.

If the Water Reservoir (5) is overfilled, the water will overflow from a hole on the back of the product.

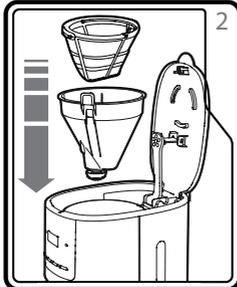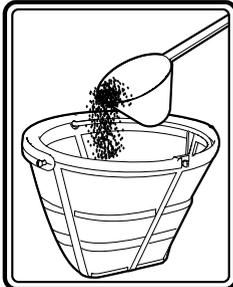


2. Use the Coffee Spoon (17) to add filter coffee into the Removable Permanent Filter (2). We recommend 7g (one spoon) of coffee per cup, use more ground coffee if you desire a stronger flavour. Place the Filter into the Removable Filter Holder (3) in the Coffee Maker.

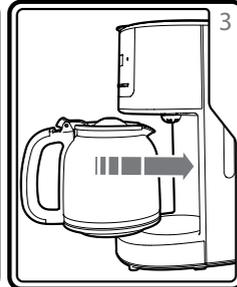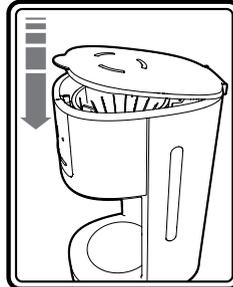


3. Close the Lid (1) and replace the Glass Carafe (15) into the Coffee Maker.
4. Press the On/Off Button (12) to start the brewing process, the Red Heating Light (8) will illuminate. To stop the brewing process, press the On/Off Button a second time.




Alternatively, not pressing the On/Off Button a second time allows the unit to automatically enter Keep Warm mode for 40 minutes.

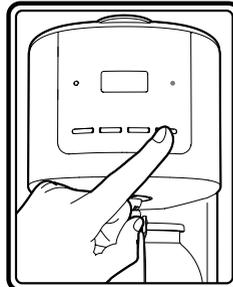

## TO PRE-SET A BREWING TIME

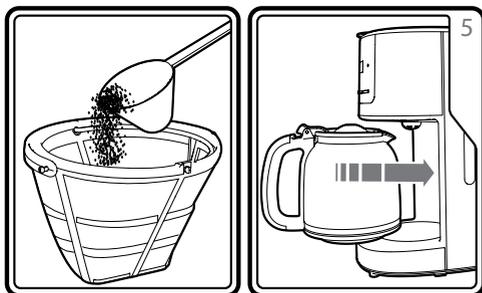

5. Follow 'Using your Coffee Maker' steps 1-3 on page 5.
6. Press the Auto/Prog Button (11) so that the Green Programme Light (6) illuminates and 12:00 AM flashes on the Display Screen (7).
7. Select the brewing start time using the Hour (9) and Minute (10) Buttons.
8. When you have selected the desired time, wait until the time and the Green Programme Light (6) stop flashing. Once set, the Display Screen will return to displaying the current time.

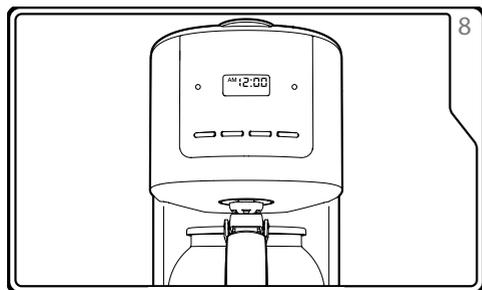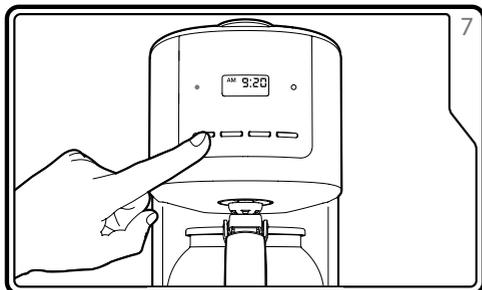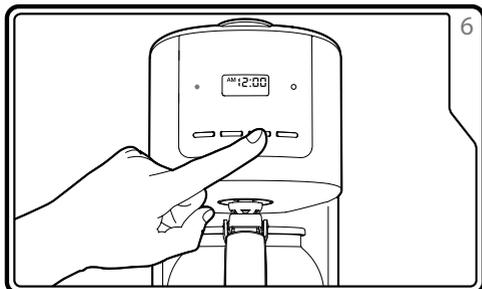

To activate the timer, press and hold the Auto/Prog Button (11) for approximately 5 seconds. The Green Programme Light (6) will illuminate and the programme is set.

## KEEP WARM

After the brewing cycle has finished, your Coffee Maker will activate the keep warm function which will keep your coffee warm for approximately 40 minutes.

The On/Off Button (12) will remain illuminated, then switch off when the keep warm cycle has finished.

To switch the keep warm mode off press the On/Off Button.

## DESCALING

- If you live in a hard water area, we recommend that your Coffee Maker is descaled at regular intervals, e.g. every 1-2 months. In areas of moderately hard water, you should descale every 6 months.
- If the water filters through more slowly than usual, or if water still remains in the reservoir at the end of a cycle, it is a sign that descaling is necessary.
- We recommend you use a proprietary liquid descaler which is especially made for coffee makers and plastic kettles. Follow the instructions on the bottle or sachet, and then operate the Coffee Maker with just water 3 times before making coffee.
- Do not use a kettle descaler unless the packet specifically states it is suitable for Coffee Makers.

## CONTACT US

### Customer Care

If you are having a problem with your appliance, please call our Customer Care Centre, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

### Talk To Us

If you have any questions, comments, want some great tips or recipe ideas to help you get the most out of your products, join us online:

- Website: [www.morphyrichards.com.au](http://www.morphyrichards.com.au)
- Facebook: [www.facebook.com/MorphyRichardsAUS](http://www.facebook.com/MorphyRichardsAUS)
- Pinterest: [www.pinterest.com.au/MorphyRichards1](http://www.pinterest.com.au/MorphyRichards1)
- Instagram: [www.instagram.com/morphyrichardsau](http://www.instagram.com/morphyrichardsau)

Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

**Glen Dimplex Australia Pty Ltd**  
8 Lakeview Drive,  
Scoresby 3179, Victoria  
Australia  
Ph: 1300 556 816

**Glen Dimplex New Zealand Ltd**  
38 Harris Road, East Tamaki,  
Auckland 2013  
New Zealand  
Ph: 0800 666 2824



Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and wellbeing.

**morphyrichards**

Glen Dimplex Australia Pty Ltd  
8 Lakeview Drive  
Scoresby VIC 3179  
Phone: 1300 556 816  
Email: [sales@glendimplex.com.au](mailto:sales@glendimplex.com.au)  
Web: [www.morphyrichards.com.au](http://www.morphyrichards.com.au)

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.